



MODEL NO. 12.1300.CAP Series

SHO-OFF® LED Light

General Information:


The LED Light is equipped with an internal flasher. It comes from the factory in a random flash mode.

To change flash pattern, press the momentary switch (Located on the plug adaptor). Each time the momentary switch is pressed, the flash pattern will change.

Flash Patterns

- | | | |
|-----------------------------|-----------------------------------|----------------------------------|
| 1. Single simultaneous | 10. Random 1-8, all simultaneous | 20. Steady - Single |
| 2. Double simultaneous | 11. Single alternate | 21. Steady - Double |
| 3. Quad simultaneous | 12. Double alternate | 22. Steady - Quad |
| 4. Oct Simultaneous | 13. Quad alternate | 23. Steady - Oct |
| 5. Double - On simultaneous | 14. Oct alternate | 24. Steady - Double - On |
| 6. Quad - On simultaneous | 15. Double - On alternate | 25. Steady - Quad - On |
| 7. Triple simultaneous | 16. Quad - On alternate | 26. Steady - Triple |
| 8. 12 Flash simultaneous | 17. Triple alternate | 27. Steady - 12 Flash |
| 9. Steady simultaneous | 18. 12 Flash alternate | 28. Random 20-27, 1 side steady |
| | 19. Random 11-18, all alternating | 29. Random All 1-8, 11-18, 20-27 |

Note: To use patterns 20-29 press the momentary switch for more than 30 seconds.

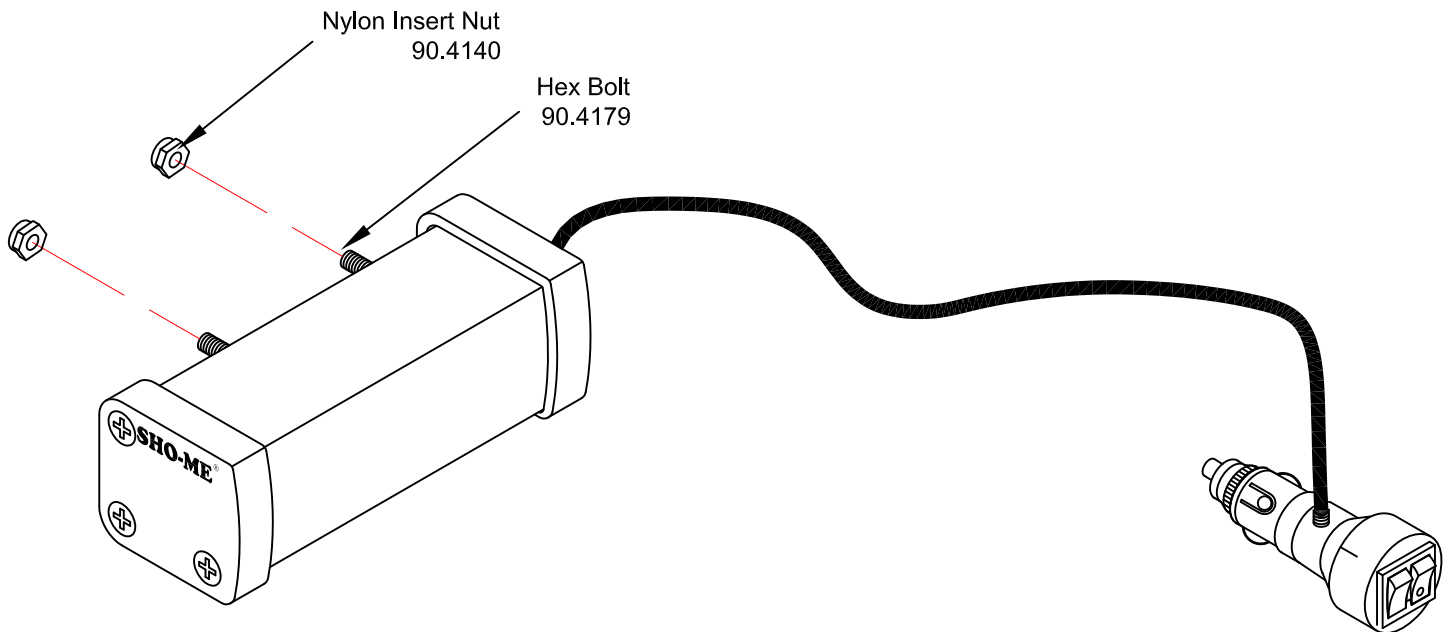

PRODUCTS COMPANY • 804 East Hwy. 248 • Cassville, MO 65625
U.S. and Canada Toll Free Numbers • Phone: 800-641-4098 FAX: 800-526-1240
E-mail: sales@able2products.com WEB: www.able2products.com