

Model No. 12.3810 Headlight Covert LED Kit 12-24VDC

Kit Installation

- 1. Remove the Headlight from vehicle.
- 2. Select location to mount lighthead.
- 3. Drill 1 inch diameter hole in the light assembly.
- 4. Insert lighthead into hole and secure with supplied screws.
- 5. Apply silicone (user-supplied) for better seal.

WARNING: DO NOT cover heat sink with silicone. It may cause damage to the product and void warranty.

Flash Patterns


- 1. Steady Burn
- 2. Random Flash
- 3. Single Flash
- 4. Double Flash
- 5. Mega Flash
- 6. Quad Flash
- 7. Quad Flash / Mega Flash
- 8. Single Flash / Mega Flash
- 9. Single Flash / On

- 10. Double Flash
- 11. Quad Flash
- 12. Quad Flash / On
- 13. Ultra Flash
- 14. Quint Flash
- 15. Quad Flash / Single Flash
- 16. Ultra Flash / Single Flash
- 17. Double Flash


Wiring instructions

Flash Pattern Selection

- 1. Touch White wire to +12v for 5 seconds to set to default "Steady Burn" pattern.
- 2. Touch White wire to +12v momentarily to select next flash pattern.
- 3. Alternating: If you desire alternating patterns, cut blue wire on one light per kit. **NOTE:** Insulate wire after cutting.

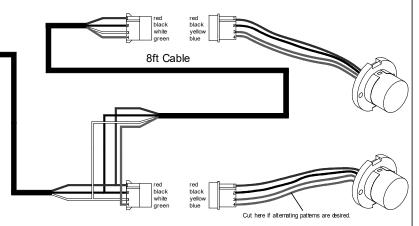



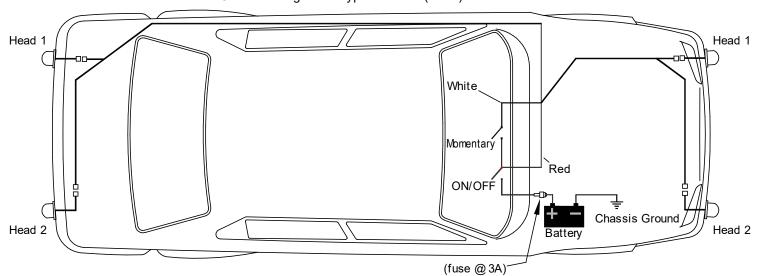



PRODUCTS COMPANY • 804 East Hwy. 248 • Cassville, MO 65625

U.S. and Canada Toll Free Numbers • Phone: 800-641-4098 FAX: 800-526-1240

E-mail: sales@able2products.com WEB: www.able2products.com