

**SHO-ME®**

**MODEL NO.**

**01.4421 / 4443 Incandescent**

**01.4422 / 4444 Halogen**

**Roto-Beacon**

**PRODUCT SPECIFICATIONS:**

Optimum Operating Voltage:	+13.8 VDC
Operating Current 2 Bulb:	Incandescent 6.4 amps / Halogen 6.8 amps
Operating Current 4 Bulb:	Incandescent 11.8 amps / Halogen 12.6 amps
Recommended Fuse:	2 Bulb - 15 amp 4 Bulb - 20 amp

**INSTALLATION INSTRUCTIONS:**


1. Remove lens from the lamp by unsnapping suitcase latch on the retaining band.
2. Place the light on the roof of vehicle and determine a point on the roof where the light will be level in all directions.
3. Use light base to mark three mounting holes and a grommet hole on roof, using a sharp pointed tool.
4. Drill three 9/64" mounting holes and one 1/2" grommet hole in roof.
5. Place grommet (included) into 1/2" hole and run wire through grommet. Slide the wire between the roof and the headliner. Route wire to switch, keeping in mind airbag deployment area and any other obstacles.
6. To prevent leaks, the grommet and wire should be sealed at the roof opening. Place ground ring terminal over one of the three mounting screws. Attach the base to the roof using the three (3) sheet metal screws and six (6) rubber washers provided. To keep lamp level tighten all screws equally. **NOTE: The rubber washers provide a leakproof seal, plus mounting the lamp high enough so that the retaining ring can easily be removed.**
7. Position gasket on top edge of pan before installing lens. Place the lens on the lamp base and the retaining band around the lamp and snap the suitcase latch on the band.

**CLEANING INSTRUCTIONS:**

Clean with soft cleaning tissue with very light pressure. **DO NOT** use cleaning fluids or abrasive cleansers which will scratch and dull surface.

**Able 2**

**PRODUCTS COMPANY • 804 East Hwy. 248 • Cassville, MO 65625**  
**U.S. and Canada Toll Free Numbers • Phone: 800-641-4098 FAX: 800-526-1240**  
**E-mail: sales@able2products.com WEB: www.able2products.com**

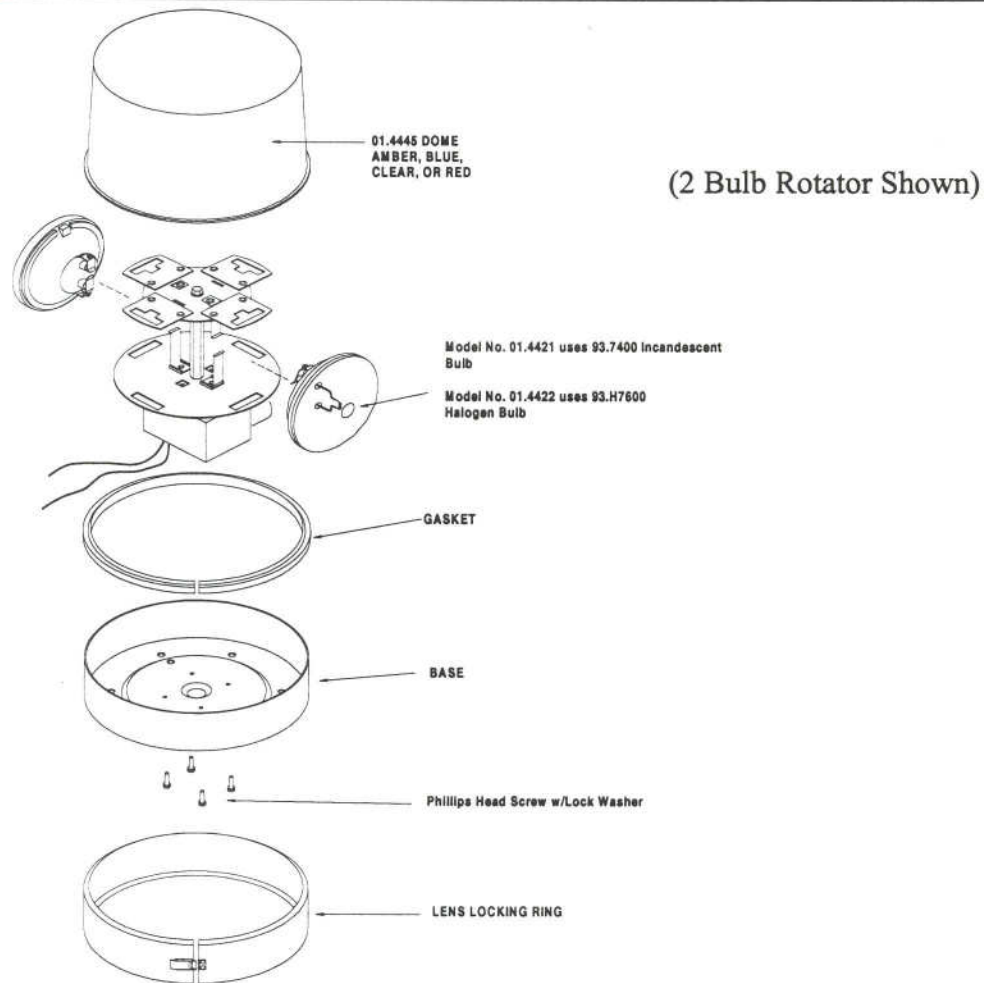

### LIMITED WARRANTY

Able 2 Products Company warrants each new product (except bulbs, strobe power supplies, and strobe tubes) to be free from defects in material and workmanship for a period of two years from the date of purchase. (Power Supplies - 5 yrs.—Strobe Tubes - 1 yr. - Halogen and Incandescent Bulbs no warranty) During this warranty period, the obligation of Able 2 is limited to repairing or replacing, as Able 2 may elect, any part or parts, which after examination by Able 2 are determined to be defective, when they are delivered pre-paid. This limited warranty does not cover travel expense, the cost of specialized equipment for gaining access to the product, or labor charges for the removal and re-installation of the product.

Able 2 Products Company shall not be liable for incidental or consequential damages, including but not limited to: Loss of use of vehicle, Rental of substitute vehicle, Loss of time, Loss of work, Inconvenience, Transportation expenses, Telephone, Lodging, Loss of revenue, Loss of and/or damage to personal property for or arising out of breach of any express or implied warranty of its products.

Use of lamp or other electrical load of a wattage higher than installed or recommended by the factory, or use of inappropriate or inadequate wiring or circuit protection causes this limited warranty to become void. Able 2 Products Company will in no way be liable for any loss of profits or any indirect or consequential damages arising out of any such defect in material and workmanship whether loss is due to negligence or breach of warranty. This limited warranty does not apply to shipping damage, accident, alteration, tampering, misuse or abuse and unauthorized service.

This limited warranty is expressly in lieu of all other express or implied warranties, including the implied warranty of merchantability and the implied warranty of fitness for a particular purpose, and of all other obligations or liabilities on the part of Able 2 Products Company. There are no warranties, unless expressed in authorized Able 2 literature, which extend beyond the description of the face hereof. No dealer, distributor, employee, or representative of the company is authorized to change this warranty in any way or to grant any other warranty.

### PRODUCT RETURNS

If a product must be returned, contact our factory by calling 1-800-641-4098 to obtain a Return Authorization Number (RA) before you ship the product. Write the RA Number clearly on the package and return it to Able 2 Products Company, P.O. Box 543, 804 E. Hwy. 248, Cassville, MO 65625-0543. A packing slip should be included with all shipments listing the sender's name, address, daytime phone number and description of defect. Your product will be put in first-class operating condition or replaced